

Thank you for giving **SAHARA** the chance to earn your business! We are confident you will find that **SAHARA** offers an outstanding combination of performance and value in everything we make. To ensure you get the most out of your new **1680018**, please take a moment to read this manual before you get started.


WARNING

Please read the Manual carefully before operating this unit.

- Please do not attempt to open or modify this unit. Warranty will be voided if there is any evidence of this unit being tampered with.
- Please turn off the unit when not in use.
- Please place this unit away from extreme heat, and make sure it is placed on a flat surface.


Key Functions

1. Power
2. Power Indicator
3. Microphone Input
4. Microphone Volume
5. Music Volume
6. Bass Control
7. Treble Control

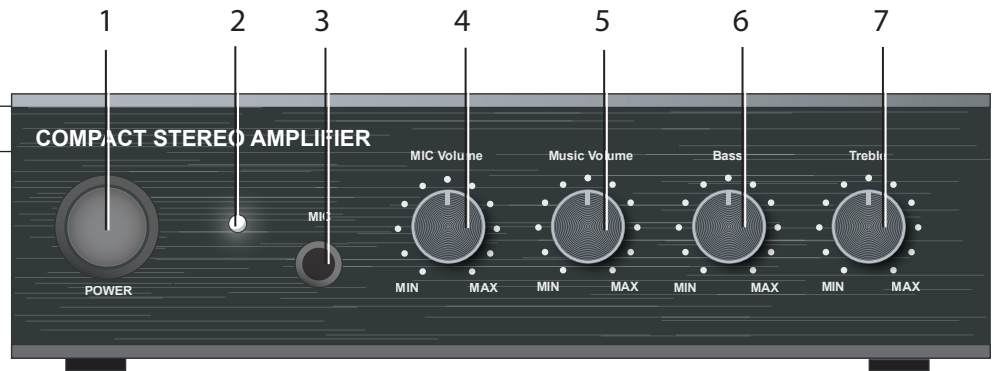

Rear Connections

1. Source Input
2. Stereo Input
3. Speaker Output
4. AC Power Input
5. Fuse

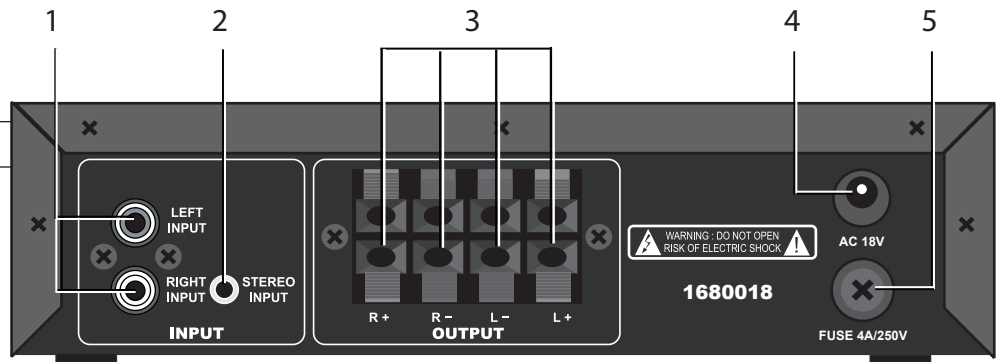

- (1) **Input**
Line input is used to connect a local source such as CD Player, Computer Sound Card, Television Audio Output or other line level source.
- (3) **Speaker Terminals**
More than one pair of speakers can be used with the **1680018**. We have provided two pairs of speaker outputs. The speaker terminals are color coded.

Troubleshooting

Press POWER switch and LCD does not shine.	Q: Power switch is not inserted or not completely inserted. A: Firmly insert the switch power.
	Q: Output guide wire is not properly connected. A: Inspect the output guide wire for complete connection.
No sound	Q: Proper sound volume is not selected. A: Utilize mode switch to select proper sound source.
	Q: Loudspeaker is not connected firmly A: Connect Firmly

Specification

Power Amplifier Output Power	25W x2
Power Supply	AC 18V
Frequency Response	5 to 65 kHz, +/- 3 dB
Output Impedance	4 ~ 8 ohm